





Setup Instructions - Top View

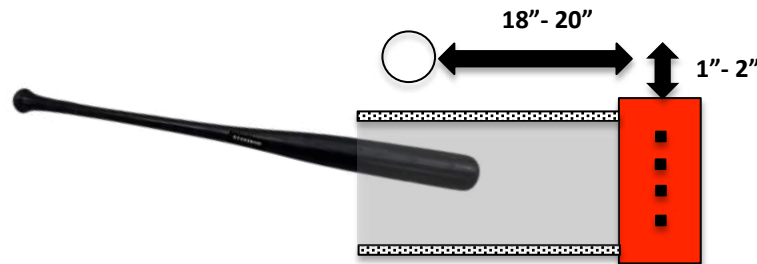

1. Recon should be placed 18-20" away from tee
2. You want the recon 1-2" behind the tee. We want to measure the tip of the bat directly prior to contact
3. Make sure not to place the second LED emitter in line with the tee (after contact) as speeds are much slower once contact is made with the ball
4. Be aware that if a player hits the tee, it may "walk forward" and inch or two – reset to 1-2" directly before contact

Back View – Swing Plane Adjustments

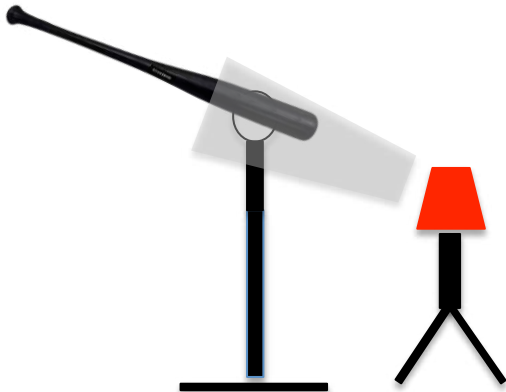

1. The Tip of the Bat **MUST** travel through both LED Emitters to get a reading
2. Depending on the hitters height and swing plane the tee may need to be adjusted
3. A steeper swing plane requires the ball on the tee to be higher
4. A flatter swing plane requires the ball on the tee to be lower
5. The dispersion angle of the LED emitters is around 5"
6. Make small adjustments (1-2") to the tee until you get a consistent readings
7. Each hitter may require a different height of the ball on the tee in relation to the Recon